


ALGE Speech System

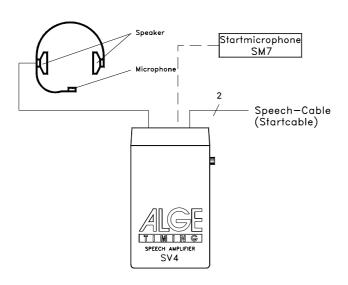


It consists of a Speech-Amplifier with Headset, as well as a second system on the other side of the cable.

Connect the Headset Q34 on socket (1) of the Speech Amplifier. Connect on the banana socket (2) the two-wire communication cable, which can also be the impulse cable.

The **Headset Q34** consists of two earphones (built in the ear piece) and a microphone (built in the mouth piece). The cable length is can be 2 or 5 Meter (a extension is not allowed).

There are three different models of the Speech-Amplifier:

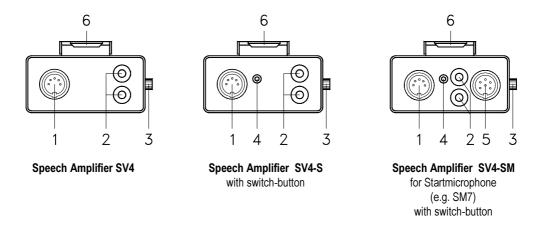

- 1..... DIN-socket to connect the Headset Q34
- 2..... Banana socket for a communication 2 wire cable (it can be combined with the impulse line)
- 3..... Volume level to adjust the volume of the earphones built in the Headset Q34
- 4 Speech Switch (to turn the microphone of the Headset Q34 on or off), and Speech Button (when you press the button you can speak)
- 6..... DIN-socket to connect the Startmicrophone
- 6..... Clips (to fasten the speech amplifier on the belt)

Turning on:

The Speech Amplifier switches automatically on, when you plug the Headset Q34. If you use the Speech Amplifier SV4-SM you should also unplug the Startmicrophone SM7, because it is also supplied from the SV4-SM.

Attention: To save the battery disconnect all cables from the Speech Amplifier after a race is over (even if you put the switch on middle position it will not switch the Speech-Amplifier off).



Volume:

With the volume lever (3) you can adjust the volume for the Headset Q34.


mimimum volume	middle position	maiximal volume
+6 dB	0 dB	-20 dB
twice standard volume	standard volume	1/20 standard volume


Power Supply:

The speech amplifier has a built in 9 Volt alkaline battery.

Power Supply:9 V Alkaline-BatteryLife Time of Battery:9 V Alkaline-Batteryabout 150 hours at 20°C for SV4 and SV4-SM including SM7about 25 hours at -20°C for SV4 and SV4-SM including SM7Low Power Monitoring:U_{Batt} < 5.5 V (rest capacity = 10%), peeping every 3 seconds</th>

  Changing the Battery:







put the battery into the

battery compartment

  V٨





press the new battery on the battery clips

 


Ø₽

9 Volt Battery

> ₽ • •

battery cover must click



Dimensions:about 120 x 73 x 40 mm (length x with x height)Weight:about 100 g (without battery)